

Modest Metal Fan Covering Data Sheet and Installation Guide

MODEST METAL FAN COVERING PARTS:

Elevate Bend, Elevate Square

SPECIFICATIONS:

13" w x 13" h
½" deep
45 degree beveled edge
Spring Clip
18 gauge aluminum
Powder-coated white

REPLACES COVERINGS FOR FANS (WITHOUT LIGHTS):

Panasonic: FV-05VF2, FV-05VK1, FV-05VK3, FV-05VQ3, FV-05VQ5, FV-08VF2, FV-08-11VF5, FV-08-11VFM5, FV-08-11VFL5, FV-08VK1, FV-08VKS1, FV-08VK3, FV-08VKS3, FV-08VQ5, FV-11VF2, FV-11VQ3, FV-11VQ5, FV-13VK3, FV-13VKS3, FV-15VQ4, FV-15VQ5, FV-0511VQ1, FV-1115VQ1, FV-05-11VKL1, FV-1115VQL1

Broan-NuTone: Flex Series, NuTone QTXE, Broan Roomside Series, Broan Bathroom Exhaust Fan

PAINTING YOUR NEW FAN COVERING

Your new fan covering comes in a white powder-coating that's ready to be installed. For versatility, our fan covering can be painted to complement any ceiling color. If you choose to paint the covering, please proceed as follows:

1. Using masking tape secure the lining paper provided. The paper will fit over the pattern.
2. With a water-dampened rag, wipe the cover face and let dry.
3. We suggest spraying or using a roller or sponge to paint the cover. Using a paint brush will result in an undesirable appearance.
4. After the paint has dried remove the tape and paper liner.
5. Your newly painted fan cover is now ready for installation.

REMOVAL AND REPLACEMENT INSTRUCTIONS

1. Grab two opposing sides of the existing fan cover and carefully pull it away from the ceiling approximately 4in (100mm).
2. Squeeze each spring to disengage from its fan slot.
3. Adjust the spring locations on your new Modern Metal fan cover to match existing fan cover.
4. Squeeze and insert new spring clips into fan slots.
5. Push your new cover up to the ceiling.

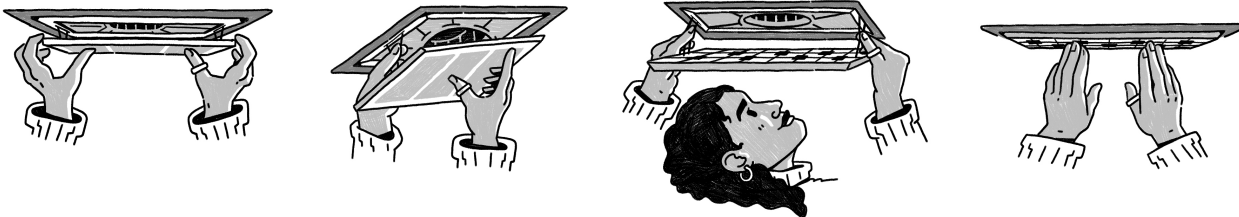


Illustration by Yuko Okabe